
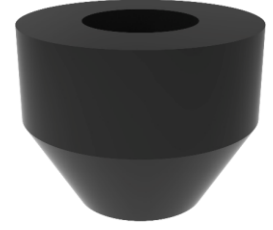


903


Baskı Pabucu / Clamping Shoe

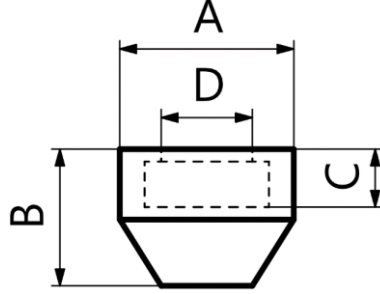

Model No	BOY SIZE	BASKI CİVATASI CLAMPING SCREW	ØA	B	C	ØD
903-1-05	1	M5	11	9	5	6
903-2-06	2	M6	15	12	6	8
903-3-08	3	M8	21	16	9	10
903-4-10	4	M10	25	17	10	14
903-5-12	5	M12	27	19	11	16

904

Somun / Nut

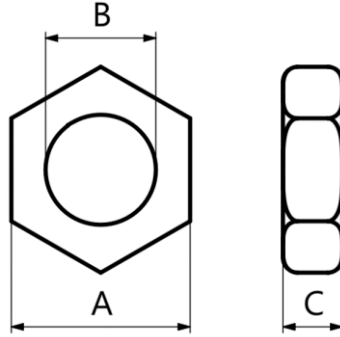

Model No	BOY SIZE	A	B	C	MODEL
904-12-15	1	19	M12 x 1,5	7	500-1, 501-1, 502-1
904-16-15	2	24	M16 x 1,5	8	500-2, 501-2, 502-2
904-20-15	3	30	M20 x 1,5	9	500-3, 501-3, 502-3
904-24-15	5	36	M24 x 1,5	10	500-5/6, 501-5/6, 502-5/6
904-27-15	7	41	M27 x 1,5	12	500-7, 501-7, 502-7